

Figure 1b:
Front Panel of Model 615XL Indicator

CALIBRATING THE MODEL 615XL USING A KNOWN WEIGHT

1. Empty and zero scale.
2. Press and hold the hidden **PROG** key for 5 seconds. Indicator will read "615"
3. Press **SETUP** key. Indicator will read "Conf".
4. Press **SETUP** key again. Indicator will read "SPAn".
5. Press **PRINT SELECT** key. Indicator will read "0".
6. Place known weight on scale.
7. Use hidden **UP** key to increase the displayed number or the hidden **LEFT** key to decrease the displayed number. When the correct weight is displayed, press the **PRINT SELECT** key. Indicator will read "SPAn".
8. Press **ZERO** key. Programming is now complete.
9. If you have any questions, please call us at (308) 946-3591.

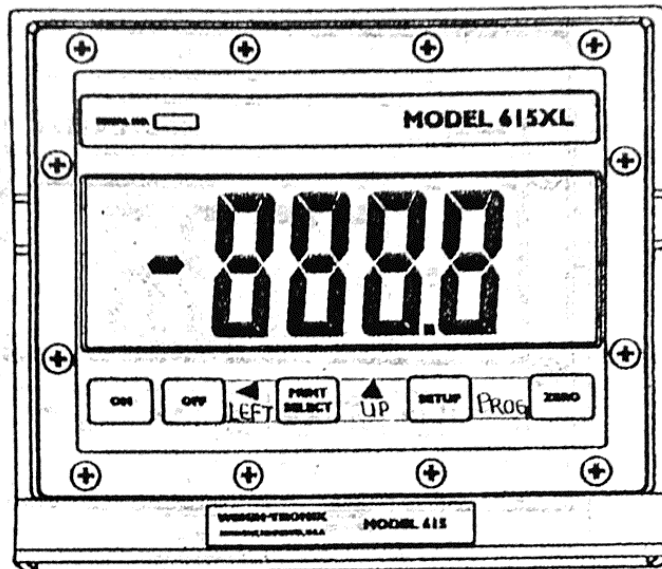


Figure 1b:
Front Panel of Model 615XL Indicator

TO CHANGE CALIBRATION ON THE MODEL 615XL

1. Press and hold the hidden **PROG** key for 5 seconds. Indicator will read "615"
2. Press **SETUP** key. Indicator will read "Conf".
3. Press **PRINT SELECT** key. Indicator will display the previously programmed number.
4. Press the hidden **UP** key to display the first digit of your program code number. Each time the **UP** key is pressed, the number displayed will increase. When you have the number displayed that you need to enter, press the hidden **LEFT** key to enter it.
5. Repeat step 4 for your remaining digits.
6. When your display reads the correct program code number, press the **PRINT SELECT** key. Indicator will read "Conf".
7. Press **ZERO** key. Programming is now complete.
8. If you have any questions, please call us at (308) 946-3591.