

CCSCALES.COM

800.582.3175



Tap Test




Rubber Mallet

The numbers on the scale head will become erratic if the weighbar is bad



If Scale Drifts

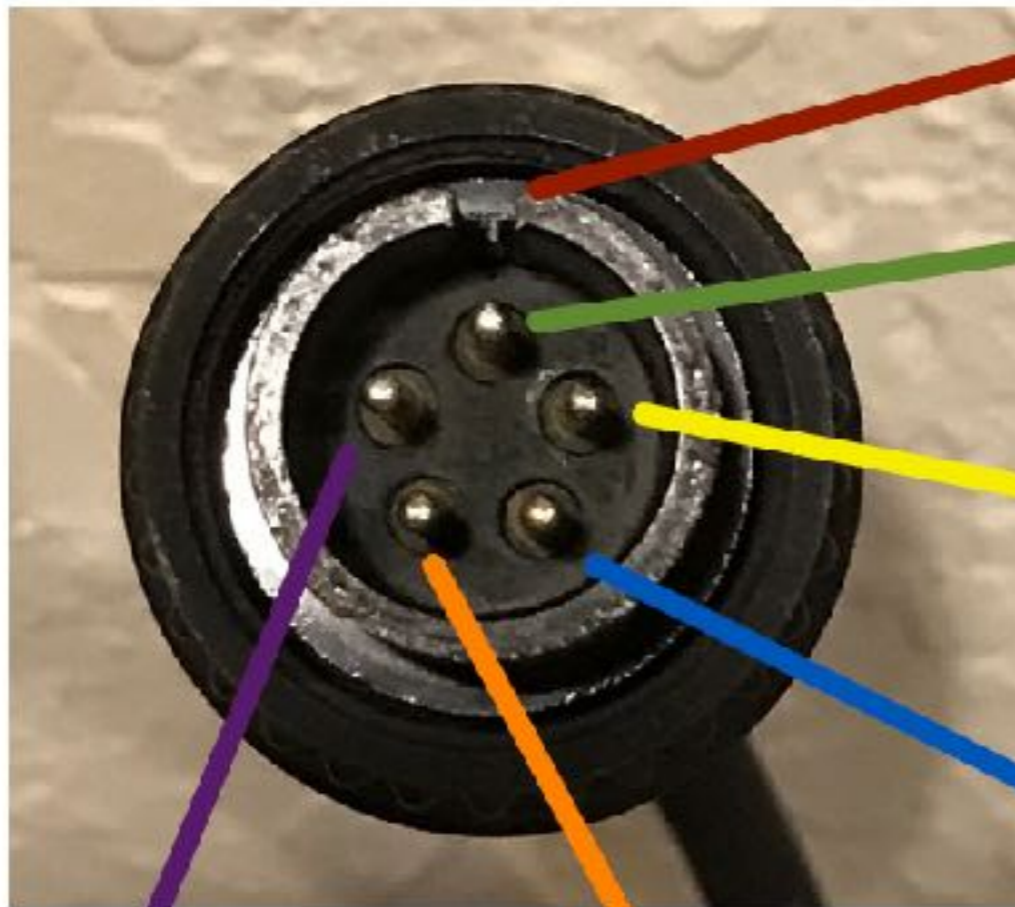

Notch place at 12

"A" pin is located at 12 under the notch

"B" pin is located at 2 on the right side

"C" pin is located at 5 on the bottom right

"F" pin is located at 10 on the top left

"D" pin is located at 7 on the bottom left

A-C = 350 Ohms
B-D = 350 Ohms
E to All = Open

Clock Positions



Color Code For Ohms

Weigh-Tronix

Red - White = 350 ohms

Green - Black = 350 ohms

Shield - All

Digi-Star

Green - White = 350 ohms

Red - Black = 350 ohms

Shield - All



SOLD AND SERVICED BY:
CENTRAL CITY SCALE INC.

2403 26th Ave.
P.O. Box 197
Central City, NE
68826



308946-3591
www.ccscales.com
ccscale@hamilton.net



SOLD AND SERVICED BY:
CENTRAL CITY SCALE INC.

3480 25th Ave.
P.O. Box 187
Central City, NC
28526



302946-0681
www.ccscales.com
ccscale@verizon.net